



SetFwdSetRwdRewDir (0xE1)

Command structure:

0xE1	0-2: motor list 6-7: backwards (0), reverse (1), forwards (2)
------	--

Reply:

0x16

Availability:

Direct/Program

LASM syntax:

`dir direction, motor list`

Explanation:

The command sets the Motor Status register with the given values.