



## OnOffFloat (0x21)

Command structure:

0x21	Bit 0-2: motor list Bit 6-7: float (0), off (1), on (2)
------	--

Reply:

0xD6

Availability:

**Direct/Program**

LASM syntax:

```
out onofffloat, motor list
```

Explanation:

The command sets the Motor Status register with the given values.