



SetPower (0x13)

Command structure:

0x13	Motor list	Power source	Power value
------	------------	--------------	-------------

Reply:

0xE4

Availability:

Direct/Program

LASM syntax:

```
pwr motor list, power source, power value
```

Explanation:

Sets the Motor Status registers with the new power levels.